

After the driver does a factory default?


Hit User function



Then Admin




Password 123456

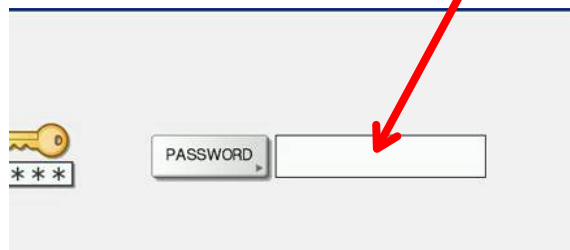

General




## Energy Saver

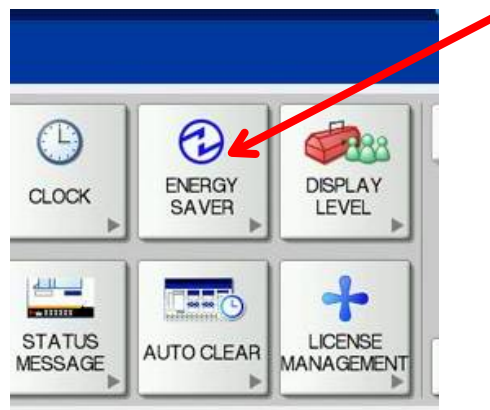

Click both Auto power save and sleep super sleep



Change Auto power save to 60

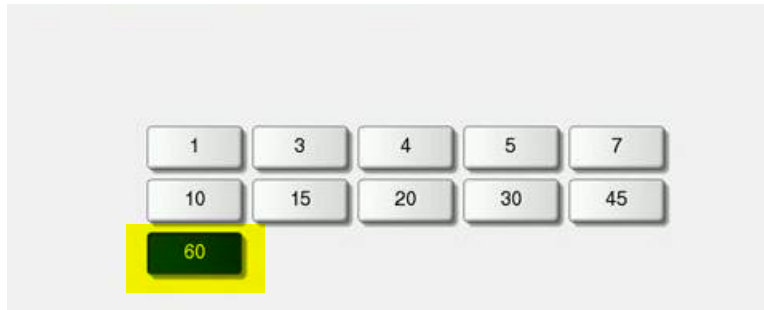

Change sleep timer to 240

Disable super Sleep

