

Enable Fax Function on Lexmark – Display Panel:

Click the **Menu** button → 

Click **Security** button → 

Click **Edit Security Setup** → 

Click **Edit Access Controls** → 

Scroll down a few pages (about 4-5) until you see **Fax Function**. You will see the following:

Fax Function  Disabled 

Click either arrow button until you see **No Security**, as shown below:

Fax Function  No Security 



Make sure to hit **Submit** when finished.