
Setting the Communication Report Output

The following conditions of the communication report output can be set.

If the [ALWAYS] button is selected: The report is output after every communication is completed.

 
If the [ON ERROR] button is selected: The report is output when a communication error has occurred.

- MEMORY TX: OFF, ALWAYS, ON ERROR
- DIRECT TX: OFF, ALWAYS, ON ERROR
- MULTI TX: OFF, ALWAYS, ON ERROR
- POLLING: OFF, ALWAYS, ON ERROR
- RELAY ORIGINATOR: OFF, ALWAYS, ON ERROR
- RELAY STATION: OFF, ALWAYS, ON ERROR
- RELAY DESTINATION: OFF, ALWAYS, ON ERROR


1 Press the [USER FUNCTIONS] button on the control panel.

2 Press the [ADMIN] button to enter the administrator password menu.


- See the [User Functions Guide] for the administrator password.

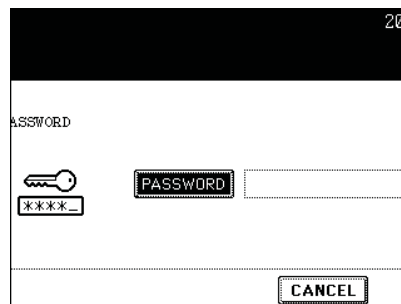

 
3 Press the [PASSWORD] button, enter the administrator password, and then press the [ENTER] button.

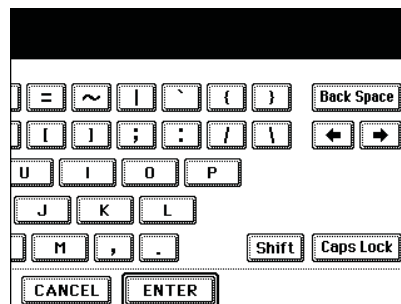

4 Press the [LIST/REPORT] button.

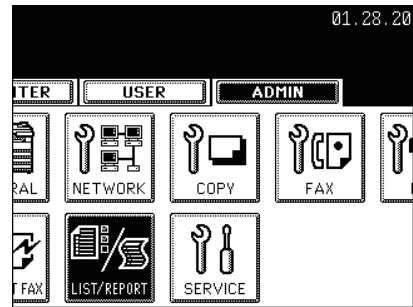 


5 Press the [REPORT SETTINGS] button.

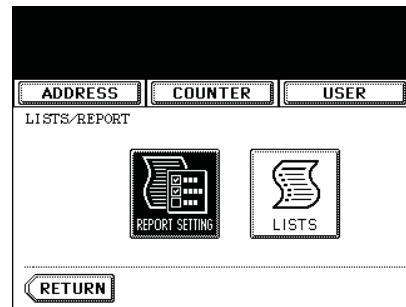 

6

 6 Press the [COMM. REPORT] button.

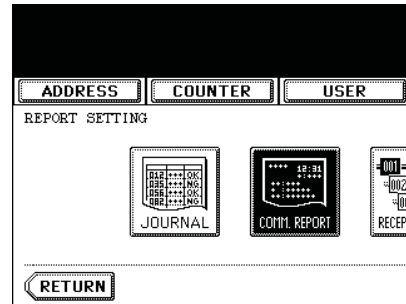

7 Press the desired buttons for each item.

- If the button for the desired function is not shown, press the [Next] button to switch screens.
- The icons highlighted in the screen on the right are the default settings. However, the [ALWAYS] button are selected for all reports as the default setting for European versions.

ADDRESS COUNTER USER

COMM. REPORT

MEMORY TX

OFF ALWAYS ON ERROR

DIRECT TX

OFF ALWAYS ON ERROR

01.28.2004 16:57

ADMIN

MULTI TX

OFF ALWAYS ON ERROR

POLLING

OFF ALWAYS ON ERROR

CANCEL ENTER Next

ADDRESS COUNTER USER

COMM. REPORT

RELAY ORIGINATOR

OFF ALWAYS ON ERROR

RELAY STATION

OFF ALWAYS ON ERROR

01.28.2004 16:57

ADMIN

 
RELAY DESTINATION

OFF ALWAYS ON ERROR

CANCEL ENTER Prev

- If you select the [ALWAYS] or [ON ERROR] button for the MEMORY TX, MULTI TX, RELAY ORIGINATOR, RELAY STATION and RELAY DESTINATION, "PRINT 1st PAGE IMAGE?" appears. Press the [YES] or [NO] button.

8 Press the [ENTER] button.

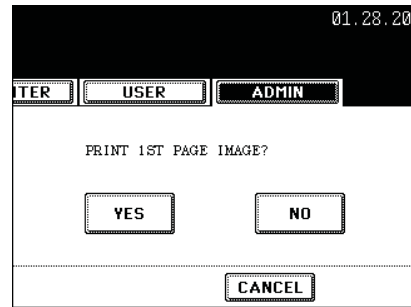

Setting the Reception List Output

- RELAY STATION: ON, OFF
Setting whether the mailbox reception report should be printed when the multi-address relay transmission is received from the multi-address relay originator.
- LOCAL: ON, OFF
Setting whether the mailbox reception report should be printed when the original is stored in the local mailbox.
- REMOTE: ON, OFF
Setting whether the mailbox reception report should be printed when the original is received from the remote Fax to the local mailbox.

6

1 Press the [USER FUNCTIONS] button on the control panel.

2 Press the [ADMIN] button to enter the administrator password menu.

- See the [User Functions Guide] for the administrator password.

