

HOW TO SET THE ENERGY SAVER TIMER

1. SELECT THE USER FUNCTION BUTTON THEN ADMIN



THEN TOUCH WHERE IT SAYS PASSWORD
THEN TYPE IN 123456
THEN SELECT GENERAL

THEN SELECT THE ENERGY SAVER



Then select the weekly timer here you can set the off and on date and times

