


# HOW TO OBTAIN COPIER IP


At copier press User Function button




Press Admin

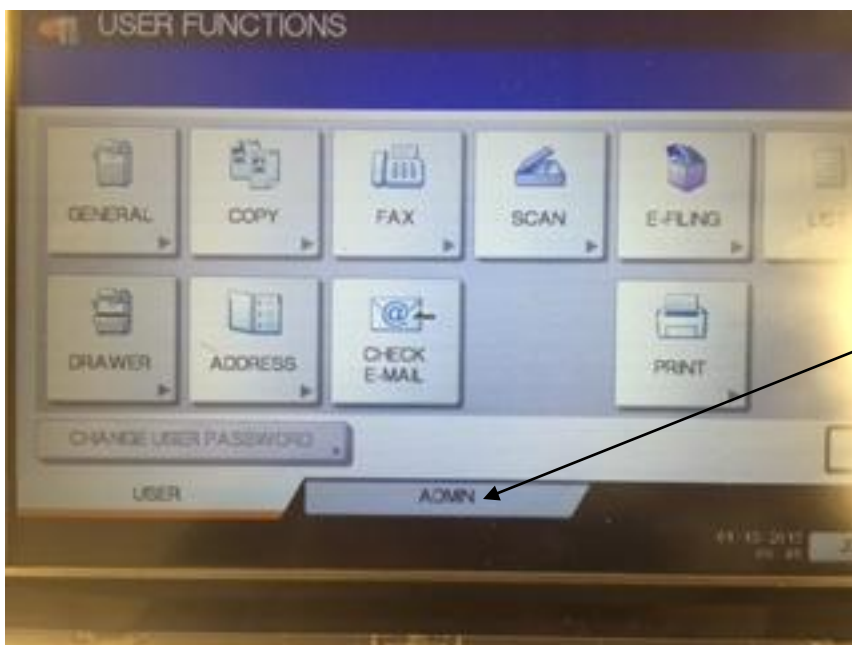

Press Password

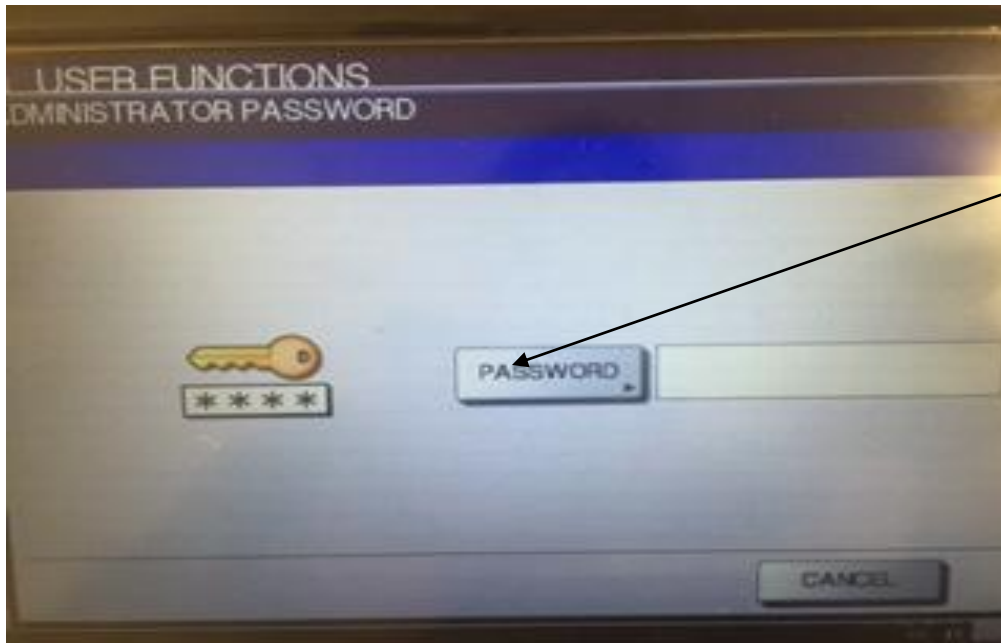


Type 123456 enter

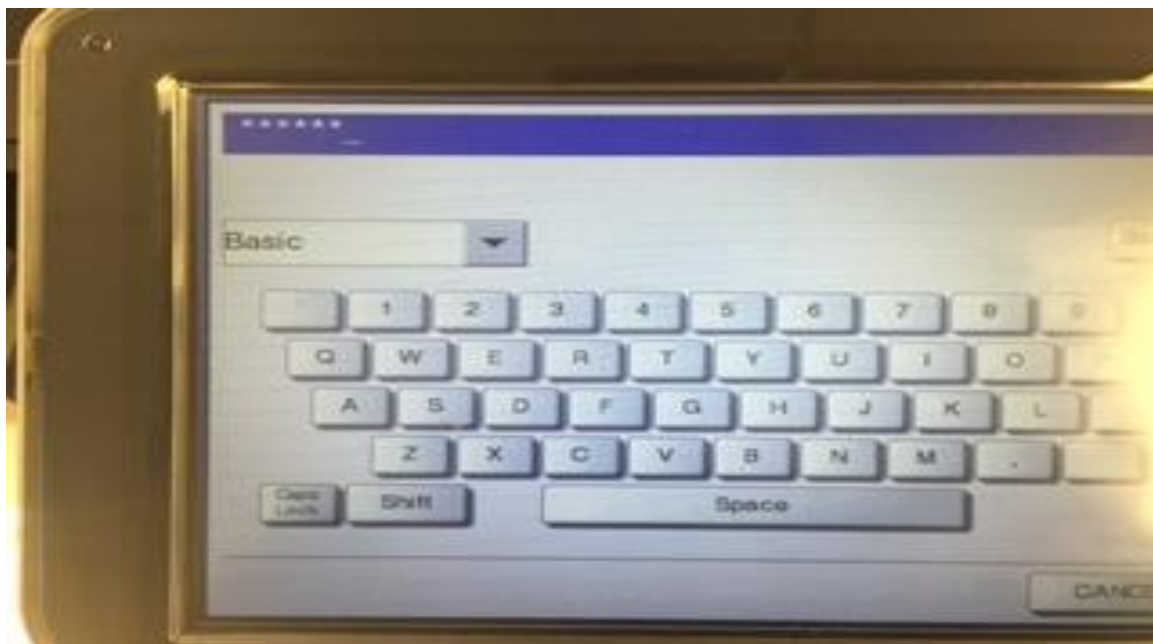

Press Network button



Press IPV4

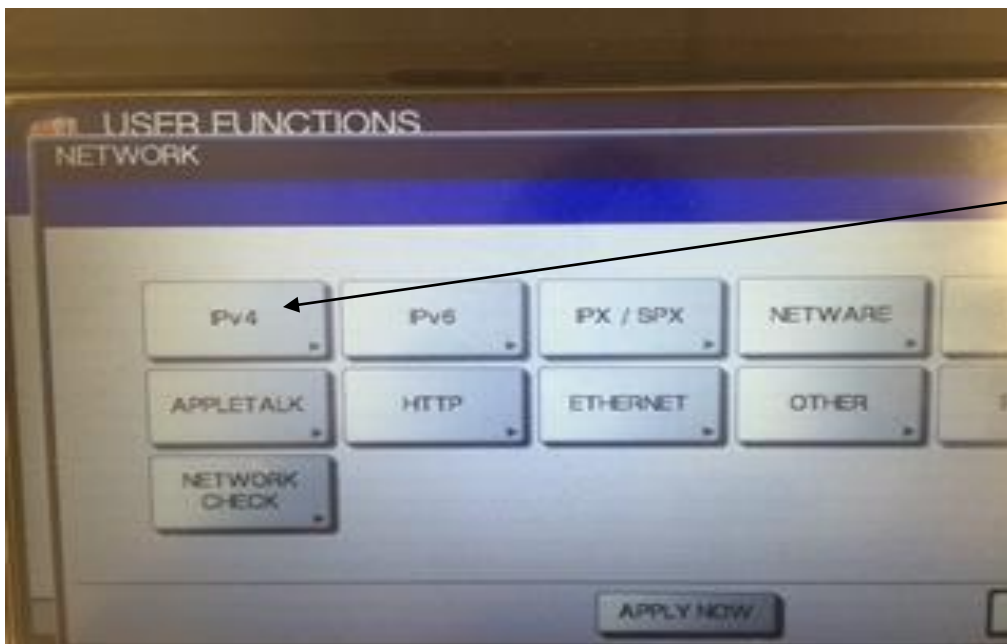

Place unit on Static and enter the new IP address

# USER FUNCTIONS

Pv4

ADDRESS MODE

DYNAMIC

NO AUTO P

STATIC

IP ADDRESS

192.168.1.1

SUBNET MASK

255, 255, 255, 0

GATEWAY

192.168.1.1

CANCEL