

How to change IP addresses

Go to the copier.

Press: user function

Admin

Password

123456 enter

Network

Ip4

At the IP address screen change from static to dynamic. press enter button, then off to the left press apply now, wait 2 minutes then go back in and write down ip address.