 
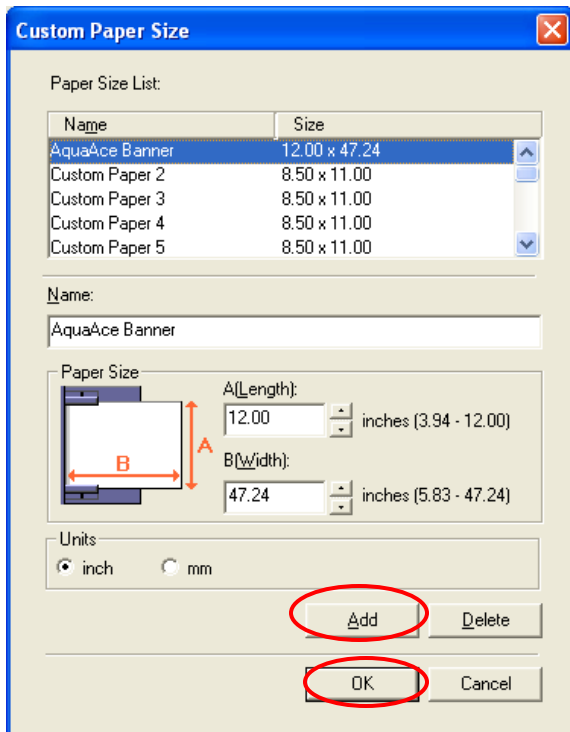 
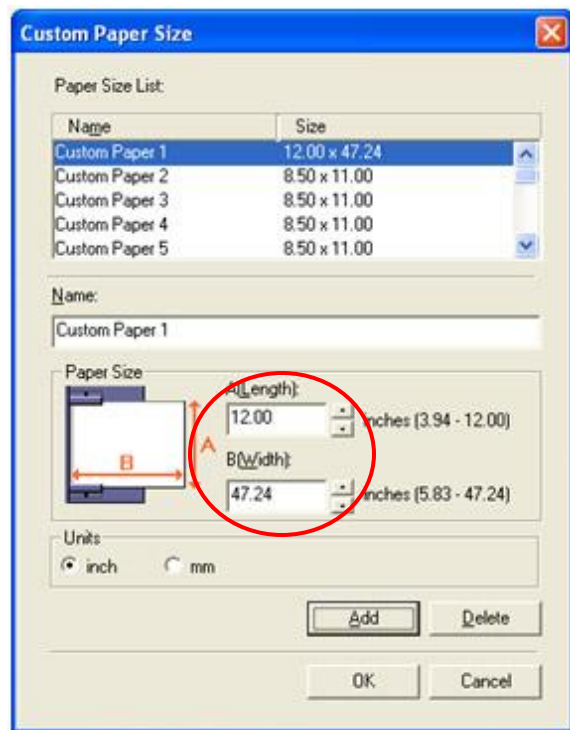 


Select any Custom Paper size not already used.

 
Set the length to the desired size. For example, 12.00" length and the 47.24" width.

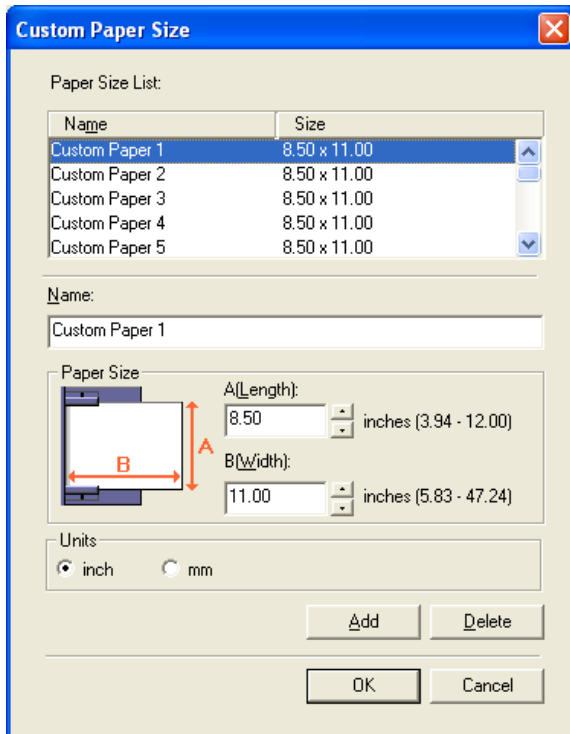

Select Add to save, then OK. If you fail to select Add your Custom Paper size will not be saved.


You have now created a custom paper size you can use when printing Banners.

Go back to the Basic tab and make sure you have not changed your normal printing preferences *unless* you are creating a printer that will just be used to print banner pages.

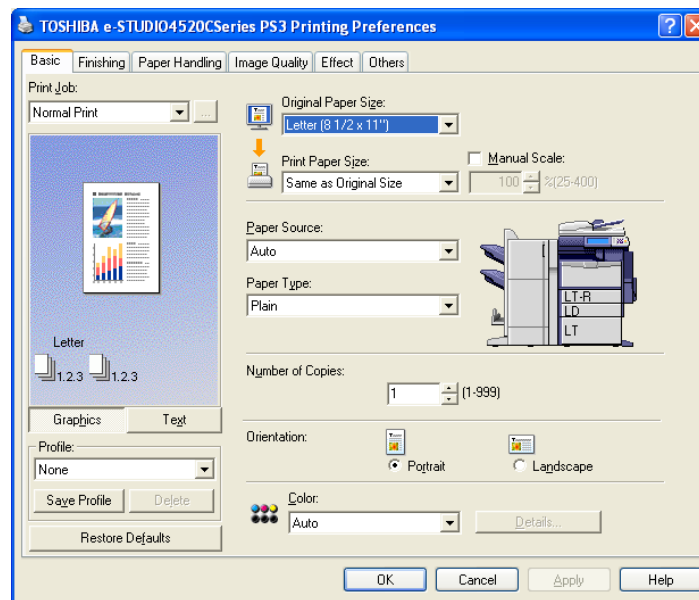


Printing the Banner Page

 Open the Banner page in the application you are printing from and select file print, then select Properties to open the Printer Properties page shown next.

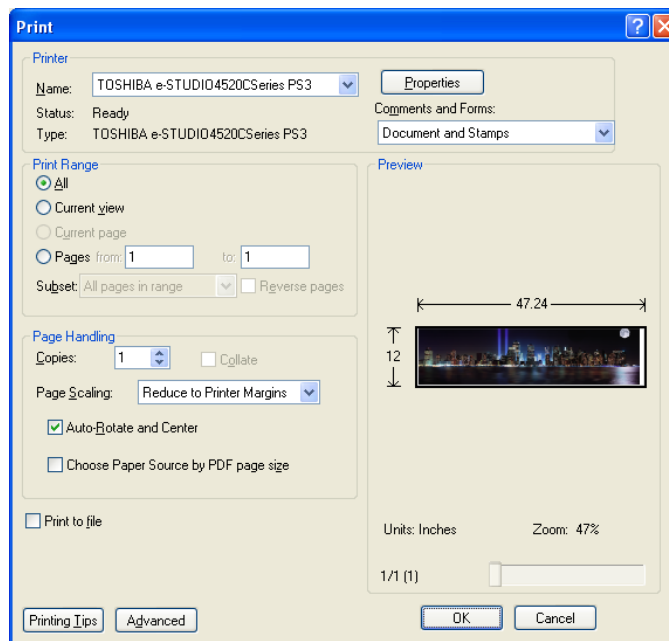

 You will be presented with the standard Printer preferences for how your printer has been setup.

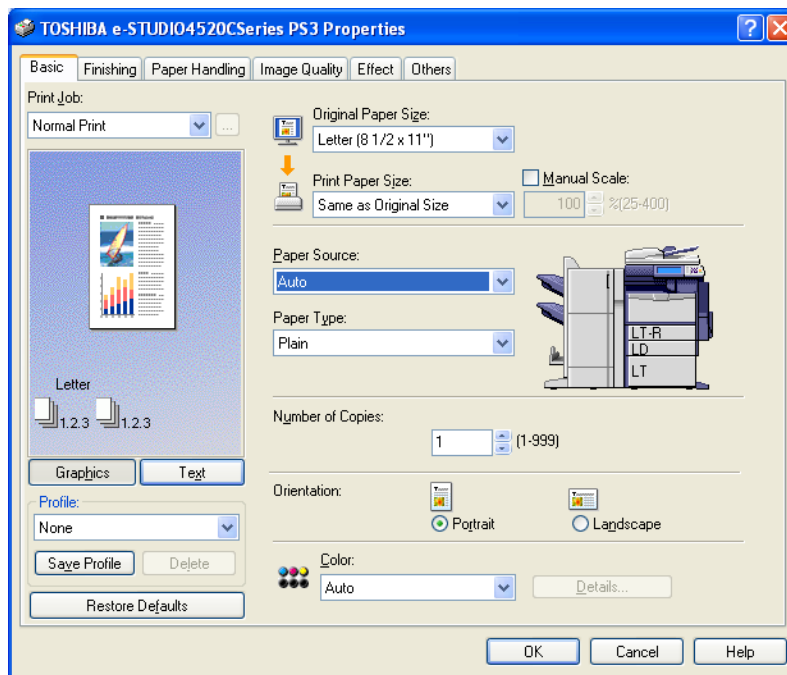

Next we will change the settings and save the Profile so you can easily print a banner page again in the future.

Set the Original Paper Size to AquaAce Banner (12.00 x 47.24) or any Custom Paper setting you created earlier.

 
The paper source should default to Bypass Tray.

Select the Paper Type as Special 1. If printing on the second side the Paper Type would be Special 1 back. If your banner paper is not AquaAce you should select the Paper Type that corresponds to the type of paper you are using.


Set the Orientation to Landscape.

Select Save Profile and give your new Profile a name like the one shown here.

Select OK.

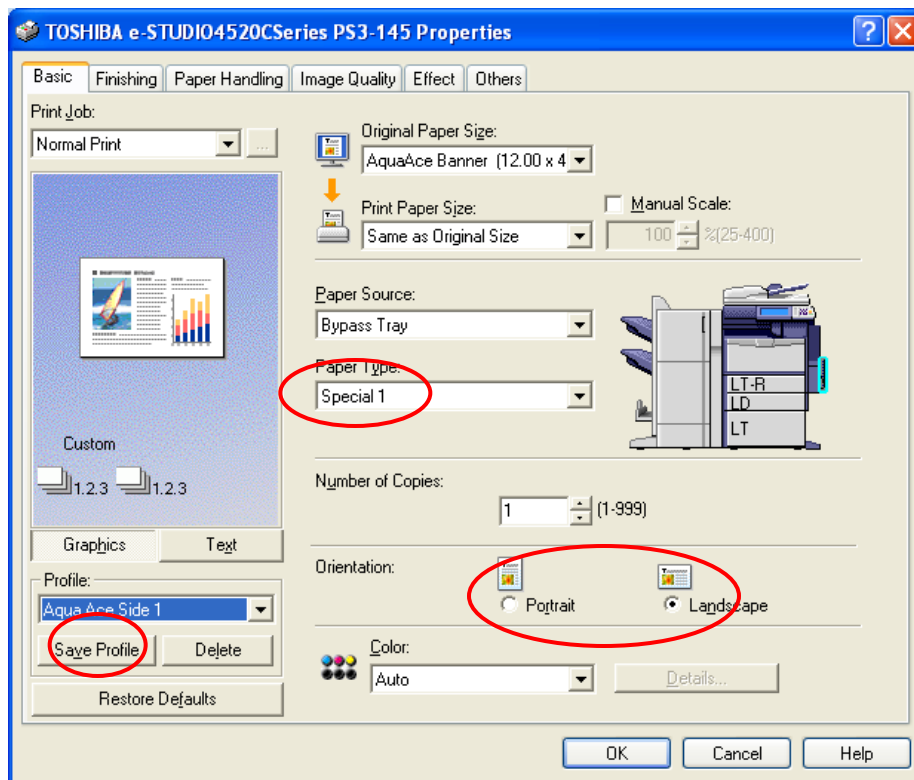

 You should be presented with a screen similar to the one shown next.

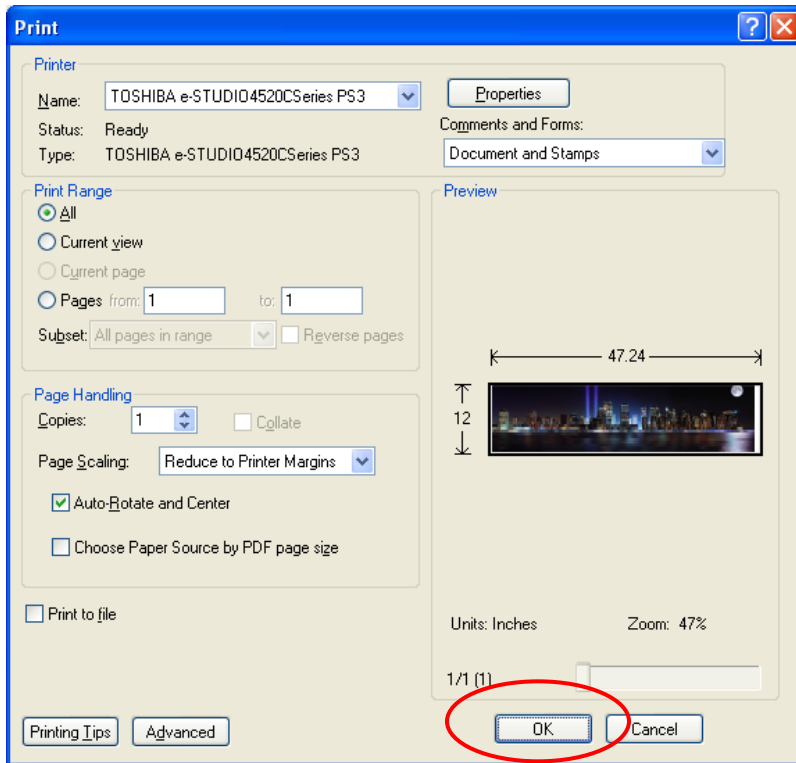

Select OK again to print the document.

You will be prompted to place the UNIV paper in the Bypass tray and press the Start button to complete the printing of your document. If the Bypass tray is not set for Special 1 paper you will also be prompted to set it to Special 1 before the Start button will activate printing.

NOTE: For additional information see page 84 in the Printing Guide.